

Basic Operation

1

Start your favorite Internet browser and enter the following URL to open the SMARTASSIST website.


URL of SMARTASSIST website

<https://ymrsac.yanmar.co.jp/mySMARTASSIST/>

2

Enter your ID and password to log into the website.

* If you have forgotten your ID and/or password, please contact your local Yanmar sales representative.

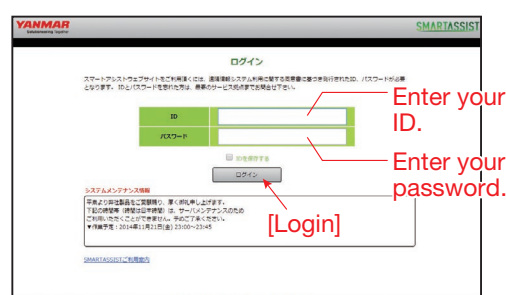

3

The Menu screen is displayed.

Click one of the icons to go to the desired screen.



4

View the operating status or change the registered information on the displayed screen.

Click the [Home] or [x] button to return to the Menu screen.



5

After using the website, click the [Logout] button, or close the browser window.



Menu Screen

Name and Function of Each Icon

1. Operation Report

Displays a monthly or daily work report that shows the working hours, traveling hours, and average engine load factor of the machine.

2. Location Information

Displays a map that shows the current location of your machines.

3. Daily Work Report

Displays the daily operation performance. You can enter a work note.

5. Your Machines

Displays a list of SMARTASSIST-ready machines that you own.

4. Daily Report Search

Allows you to search for a daily work report and display the search results.

6. Notification Settings

Allows you to set the operating time and the operating area. You will receive a theft notification if someone operates the machine outside the set time and/or area.

7. Member Management


Allows you to register members who are allowed to log into the website.

8. Registered Information

Allows you to register the owner information. You can change the ID and/or password.




1. Operation Report

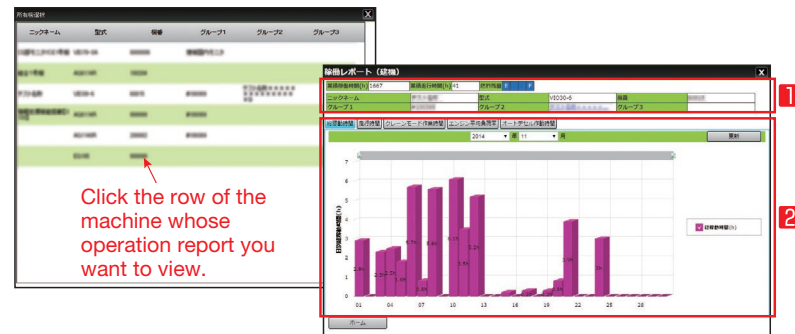


- 1 This section displays cumulative operating hours, cumulative driving hours, and remaining fuel.
- 2 This section displays a monthly or daily work report that shows the working hours, travel distance, and fuel consumption.

2. Location Information

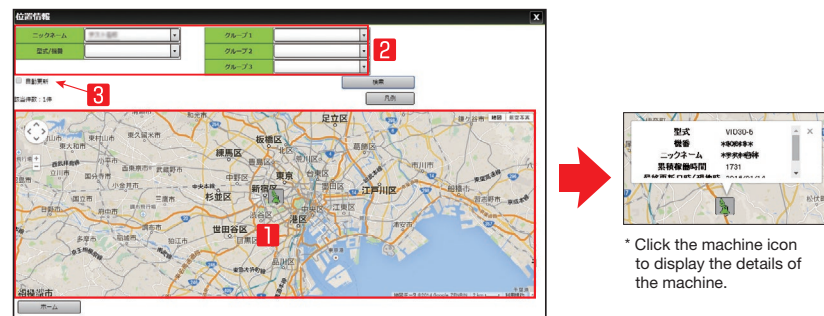

- 1 This map displays the current location of your machines.
- | Operating | Stopped |
|---|---|
| ... No error occurred. | ... No error occurred. |
| ... An error occurred in the past 30 minutes. | ... An error occurred in the past 30 minutes. |
| ... An error occurred in the past 24 hours. | ... An error occurred in the past 24 hours. |
- 2 Use these settings to narrow the search of the machines to be displayed.
 - 3 Select the [AutoUpdate] check box to update the location map every 30 seconds.
 - 4 This section displays a map that shows the location where the machine was stopped at the end of daily operation.

3. Daily Work Report

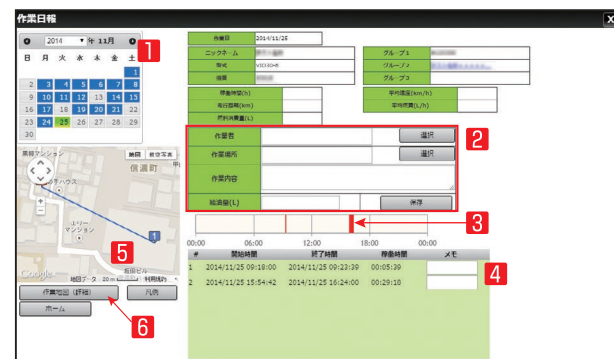


- 1 Use this calendar to select the day for which you enter a work report. (Blue: Operating days, Green: Selected day)
- 2 Use this section to record the worker name, work place, work description, and fuel quantity.
- 3 A red bar indicates the operating time period.
- 4 Use these fields to enter a note for each time period.
- 5 This map displays the location of your machines in each time period. (Red: Started; Blue: Stopped)
- 6 Click this button to display the detailed operating location.

4. Daily Report Search



- 1 Select or enter the search criteria and start a search. You can narrow the search of daily work reports.
- 2 The matching daily work reports are displayed in a list. Click the desired work date to display the daily work report.
- 3 Click this button to output the daily work reports into a CSV file.

5. Your Machines

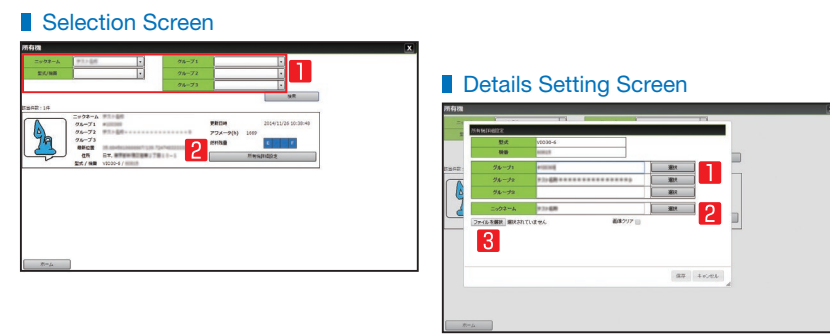

- ### Selection Screen
- 1 Use these settings to narrow the search of to be displayed.
 - 2 Click [Your Machine Details] to display the details setting screen for the selected machine.
- ### Details Setting Screen
- 1 Use these settings to specify groups. (For convenience, enter information such as the worker name, work place, and work description.)
 - 2 You can enter a nickname for the machine.
 - 3 Click this button to select the image of the machine displayed on the Selection screen.

6. Notification Settings




- 1 Operating time setting (Select the check box to enable the setting.) Set the time period in which the machine is available for use. You will receive an email notification if someone operates the machine outside the set time period.
* If the contract date for the purchase of the machine is November 10, 2014 or later, the operation time is factory set to "4:00 - 0:00 (24:00)." Change the setting as needed.
- 2 Geofence setting (Select the check box to enable the setting.) Set the area in which the machine is available for use. You will receive an email notification if someone operates the machine outside the set area.
- 3 [Map move mode]: Sets the mode to scroll or scale the map.
- 4 [Operating range setting mode]: Sets the mode to set the operating area.
- 5 [Operating range clear]: Clears the operating area setting.
- 6 [Save]: Saves the notification settings.

7. Member Management



- ### Member Management Screen
- 1 This screen displays the list of members who are allowed to log into the SMARTASSIST website.
 - 2 Use these buttons to add a member, or change or delete the registered information.
 - 3 Use this button to reset the password for the selected member. After the password is reset, a password notification email is sent to the member.
- ### Registered Information Screen
- 4 Use this screen to enter or change the details of the member.
 - 5 Click [Register] to send the initial ID and password to the member.

8. Registered Information

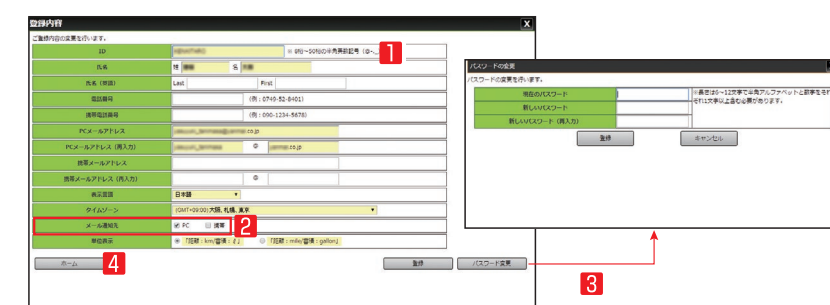

- 1 Use this screen to enter or change the details of the user.
- 2 You can set [Mail Notification Destination] to either "PC" or "Mobile Phone."
- 3 To change the password for the member, click [Change Password] to go to the Change Password screen.
- 4 Click [Register] to complete the registration of the member.