 


SMARTASSIST Web Site Instruction Manual

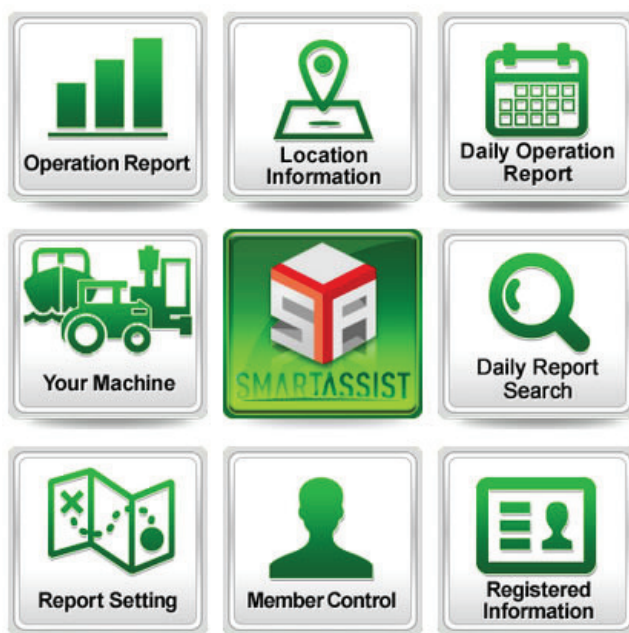

This document provides instructions on how to use the "SMARTASSIST Web Site" that provides Yanmar customers with access to the SMARTASSIST-Remote functionality.

Table of Contents

1	Read Before Use	3
	Operating Environment Requirements	3
	Conventions	3
2	Arrival of Signup Confirmation Email	4
3	Understanding the Login Screen	5
4	Logging into the "SMARTASSIST Web Site"	6
	When you log in for the first time:	6
	If you have lost your ID and/or password:	6
5	Understanding the Menu Screen	7
6	Viewing Monthly and Daily Operational Information (Operation Report)	8
	Working with the Operation Report Screen	8
	To display the total operating hours:	9
	To display the driving hours:	9
	To display the operating hours in crane mode:	9
	To display the average engine load factor:	9
	To display the operating hours in auto-deceleration mode:	10
7	Viewing the Current Location of Your Machine (Location Information)	11
	Working with the Location Information Screen	11
8	Creating a Daily Operation Report (Daily Operation Report)	13
9	Retrieving Daily Operation Reports (Daily Report Search)	17
	To download the daily reports in a text file format;	19
10	Listing or Searching for Your Machines (Your Machine)	21
	Working with the Your Machine Screen	21
11	Managing When and Where Your Machine Should Operate (Report Setting)	23
	Working with the Report Setting Screen	23
	How to Pan or Scale the Map	24
	How to Specify the Operating Hours	24
	How to Specify the Operating Area and Configure the Theft Notification Feature	24
	Changing the Map Mode	25
12	Adding Members Allowed to Log in (Member Control)	26
	Working with the Member Control Screen	26
	To add a member:	27
	To change the registration details of a member:	27
	To delete a member:	28
	To reset the password of a member:	28
	To exit from Member Control:	28
13	Entering the Owner's Registration Details (Registered Information)	29
	Working with the Registered Information Screen	29
	To change the owner's password:	30

1 Read Before Use

The SMARTASSIST Web Site is available only to customers who have accepted the terms and conditions of the "User Agreement Regarding the Use of Remote Information Systems."

Operating Environment Requirements

- 1) One of the following browsers (i.e., application software used to open Web pages) should be installed on the PC you use to connect to the Internet:
 - Internet Explorer 9.0/10.0
 - Google Chrome 23
 - Firefox 17
 - Safari 5.1
- ◆ Alternatively, you can also use a tablet (such as iPad) with one of the above browsers installed.
- 2) If none of the supported browsers are installed on your PC, it is recommended to install Google Chrome (free).

Conventions

- [] Buttons and other clickable items on the user interface are enclosed between square brackets [].

2 Arrival of Signup Confirmation Email

Signup Confirmation email will be sent to your registered email address.

This email will be addressed to the email address you filled into the "User Agreement Regarding the Use of Remote Information Systems."

Email Content

Thank you for being a Yanmar customer.

Thank you for applying for membership in "Yanmar SMARTASSIST-Remote."

This email confirms that your account has been created in "Yanmar SMARTASSIST-Remote" as detailed below:

Start of Use Date	January 8, 2014
Customer Name:	ABCD Corporation
URL	https://ymrsac.yanmar.co.jp/mySMARTASSIST/
ID	**00000
Password	*****

Important:

The following important information is contained in the Signup Confirmation email:

① URL used to open the "SMARTASSIST Web Site in your Internet browser

<https://ymrsac.yanmar.co.jp/mySMARTASSIST/>

② Initial ID and password required to log into the site

- The Registered Information page of the "SMARTASSIST Web Site" allows you to change the ID and password.
Keep your ID and password in an accessible but safe location and do not share them with unregistered persons.
- Type in the ID and password correctly; otherwise, you cannot have access to the "SMARTASSIST Web Site."

3 Understanding the Login Screen


The login screen appears as soon as you open the "SMARTASSIST Web Site."

The screenshot shows the SMARTASSIST Login page. At the top, there are logos for YANMAR and SMARTASSIST. The main heading is "Login". Below it, a small text block states: "To use the SMARTASSIST website, you need the ID and password that were provided when you agreed to the remote information system usage agreement. Users who have forgotten their login ID and password should contact the company's service representative." The login form consists of two input fields: "ID" (callout 1) and "Password" (callout 2). Below these fields is a checkbox labeled "Save the ID" and a "Login" button (callout 3). A "System maintenance information" box is visible, containing text about website downtime. At the bottom left, there is a dashed red box containing links for "Accessibility" and "Privacy policy" (callouts 4 and 5). The footer contains the copyright notice: "Copyright© 2013 YANMAR Co., Ltd. All right reserved."

- ① **ID input box**
- ② **Password input box**
- ③ **[Login] button**
- ④ **SMARTASSIST Usage Guide**
Terms of use are described.
- ⑤ **Privacy Policy**
Privacy policy statements are provided.

4 Logging into the "SMARTASSIST Web Site"

 Menu screen

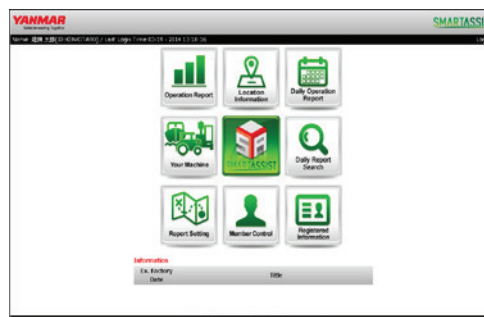

① Type in your ID and password.

- You can check the [Save ID] box to save your ID so that you can bypass typing in your ID in subsequent login attempts.
- The Registered Information page of the "SMARTASSIST Web Site" allows you to change the ID and password.

② Click [Login].

The Menu screen appears.

When you log in for the first time:

You will be presented with the terms of use.

① Read through the terms and then click the check box.

② Click [Next].

The Menu screen appears.

 
- ◆ This screen will not appear on the second and subsequent login attempts. Any time you want to refer to the terms of use, you can display the terms of use by clicking the [SMARTASSIST Usage Guide] link at the lower left corner of the login screen.

If you have lost your ID and/or password:

- If you have lost the ID and/or password for the owner account, contact your local Yanmar sales representative. In this case, password reset is required.
- If a member ID and/or password is lost, log in as the owner, then reset and reconfigure the ID and/or password using the Member Control screen. → P.28

5 Understanding the Menu Screen

The Menu screen allows you to work with the "SMARTASSIST Web Site" through the menu options described below. When you select your desired option by clicking its icon, the corresponding screen appears.

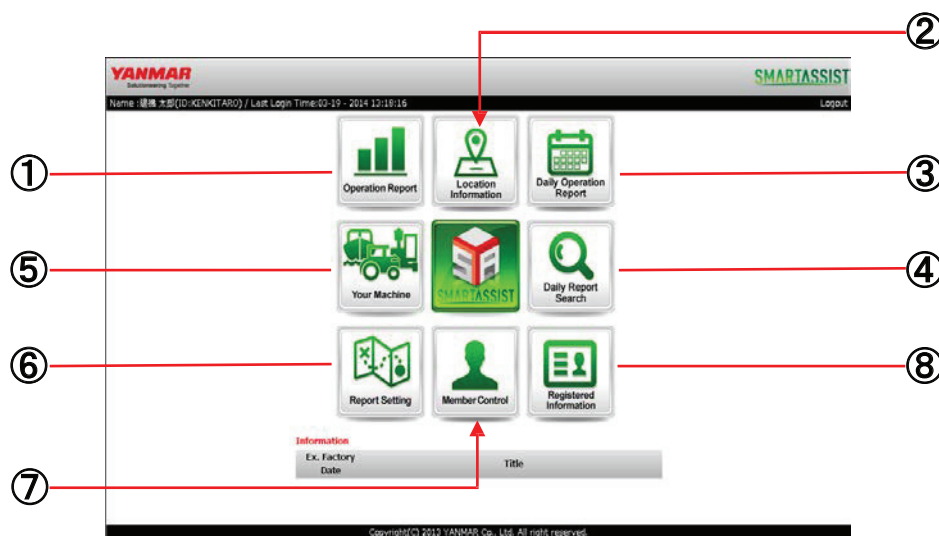

① Operation Report

➔ P.8

Displays monthly and daily operational reports that indicate the total operating hours, driving hours, operating hours in crane mode (if applicable), average engine load factor, and operating hours in auto-deceleration mode of your machine.

② Location Information

➔ P.11

Allows you to view the current location of your machine on a map.

③ Daily Operation Report

➔ P.13

Allows you to monitor daily work performance and create a daily work report.

④ Daily Report Search

➔ P.17

Allows you to search for a particular daily work report(s) and save the search results as a text file.

⑤ Your Machine

➔ P.21

Provides a list of SMARTASSIST-ready machines owned by you.

⑥ Report Setting

➔ P.23

You can configure SMARTASSIST to monitor whether or not your machine is operating only during your specified operating hours and within your specified operating area. SMARTASSIST will send a theft notification if these settings are violated.

⑦ Member Control

➔ P.26

Allows you to add, change, and delete members allowed to log in as well as to reset passwords.

⑧ Registered Information

➔ P.29

Provides access to the owner's registration details. You can change the ID and password.

- ◆ The icon displayed in the center is a non-clickable icon, and no screen is associated with it.

6 Viewing Monthly and Daily Operational Information (Operation Report)

You can view monthly and daily operational reports that indicate the "total operating hours," "driving hours," "operating hours in crane mode" (if applicable), "average engine load factor," and "operating hours in auto-deceleration mode" of your machine. You can view the current location of your machine on a map.

Working with the Operation Report Screen

 
① On the Menu screen, click .

The Select Machine screen appears.

② Click the row of the machine of interest.

The Operation Report top screen appears.


- ◆ When you hover the mouse pointer over one of the machines, its text color changes.

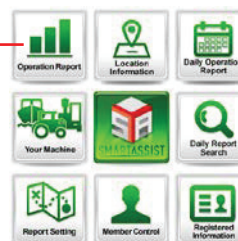

Ownership equipment selection

Nickname	Model	Machine Number	Group1	Group2	Group3
CS部モニタVET7号機	V8770-8A	0000006	建設国内モニタ		
トラクター1号機	EG105	000103	ルネーム	江戸川区	ローザリー
取巻機搬メータ搭載機	AG6114R	100204	Y133チーム	金谷グループ	
V870-6	60015				

 
Operation Report screen

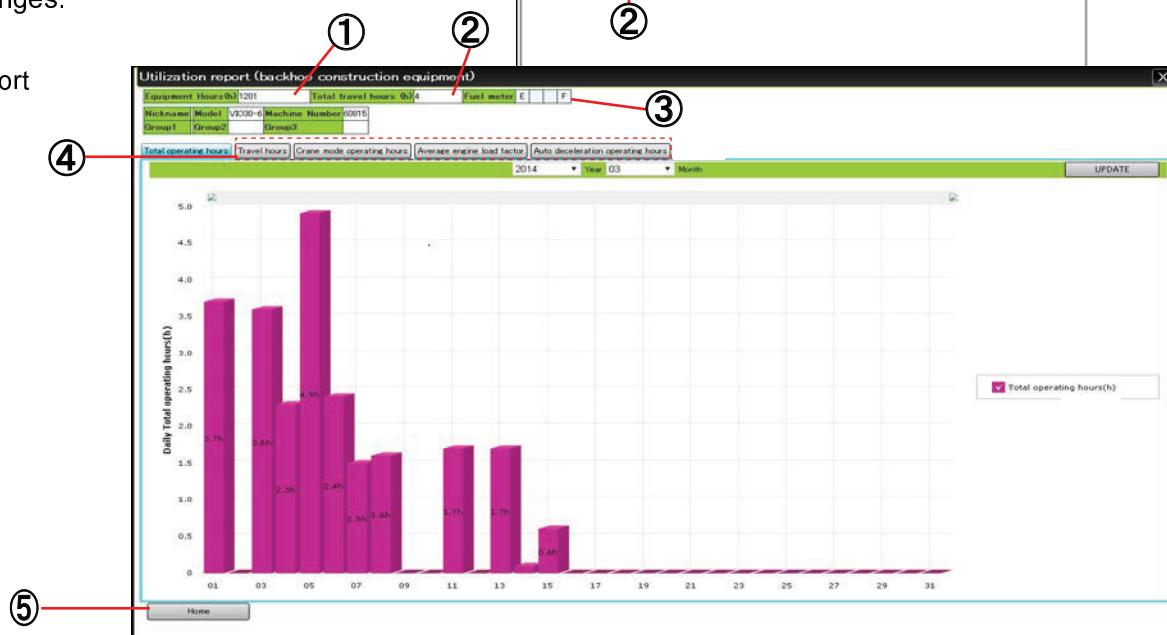

- ① Cumulative Operating Hours : Displays the cumulative operating hours of the machine.
- ② Cumulative Driving Hours : Displays the cumulative driving hours of the machine.
- ③ Fuel Level : Displays the remaining fuel quantity in four levels as of the last engine stop. (This feature is not supported by some models.)
- ④ Total Operating Hours
Driving Hours
Operating Hours in Crane Mode (if applicable)
Average Engine Load Factor
Operating Hours in Auto-Deceleration Mode (if applicable) : Displays the monthly and daily total operating hours.
- ⑤ [Close] or [x] : Click to return to the Menu screen.


To display the total operating hours:

 Click the [Total Operating Hours] tab.

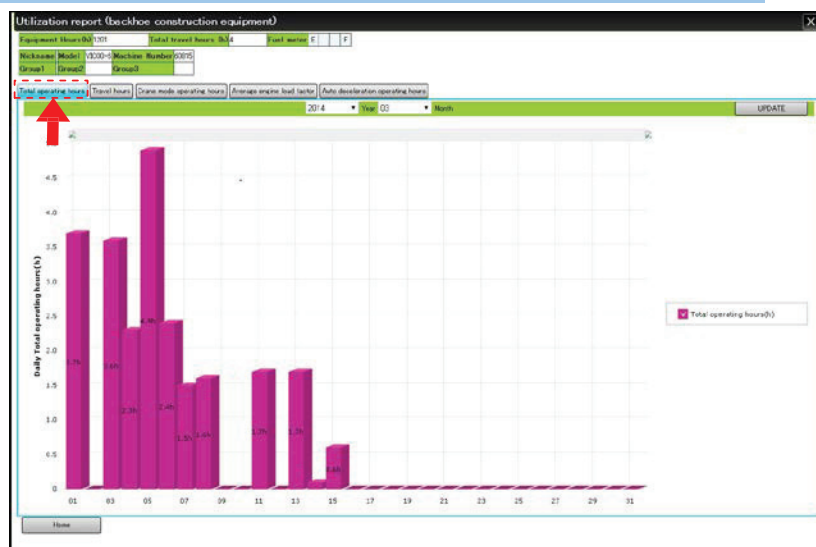


To display the driving hours:

 Click the [Driving Hours] tab.

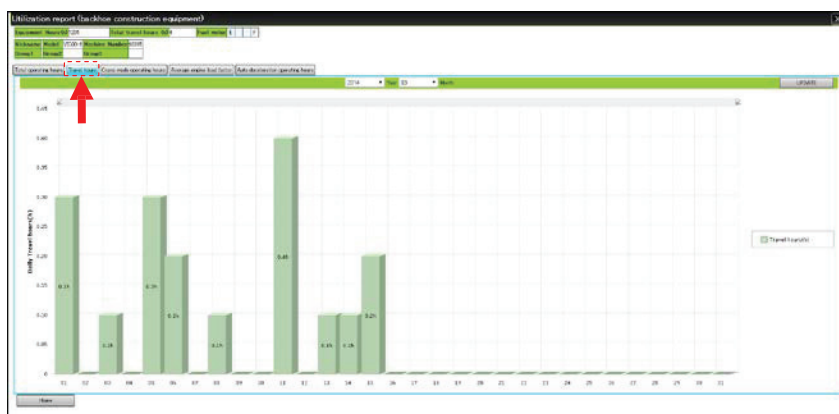


To display the operating hours in crane mode:

 Click the [Operating Hours in Crane Mode] tab.

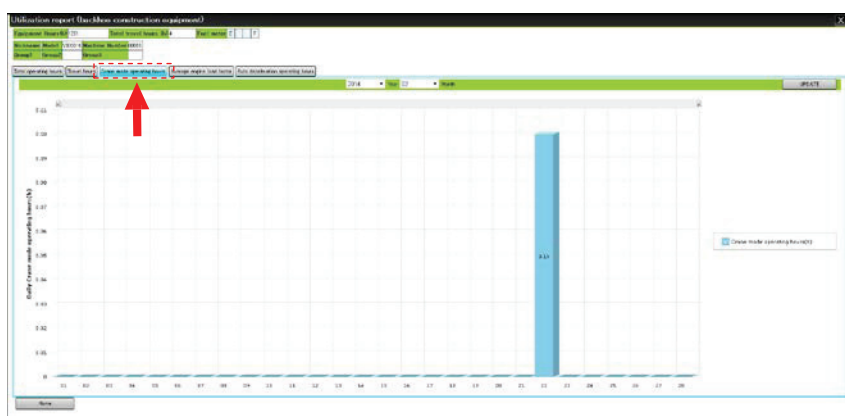

To display the average engine load factor:

 Click the [Average Engine Load Factor] tab.

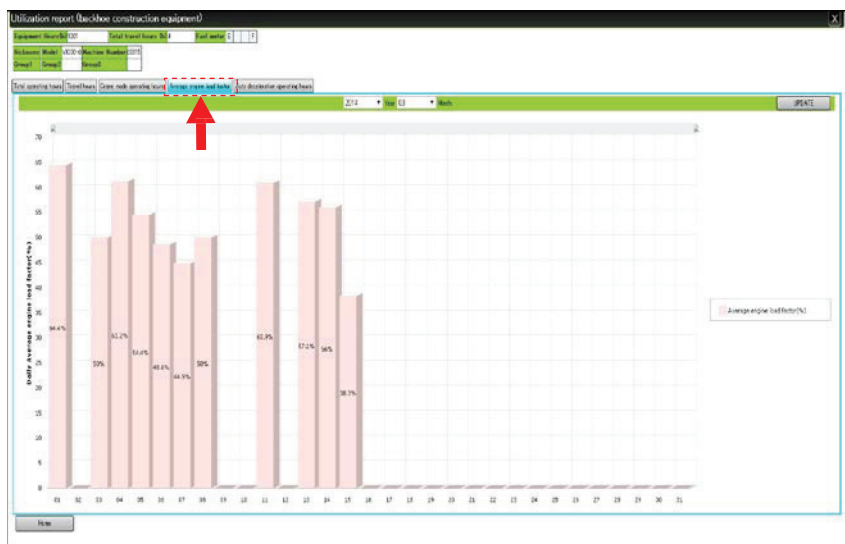

To display the operating hours in auto-deceleration mode:

Click the [Operating Hours in Auto-Deceleration Mode] tab.



7 Viewing the Current Location of Your Machine (Location Information)

You can view the current location of your machine on a map. If you have more than one machine, you can specify which machine to display.

 
Working with the Location Information Screen

① On the Menu screen, click .

The Location Information screen appears.



Location Information screen

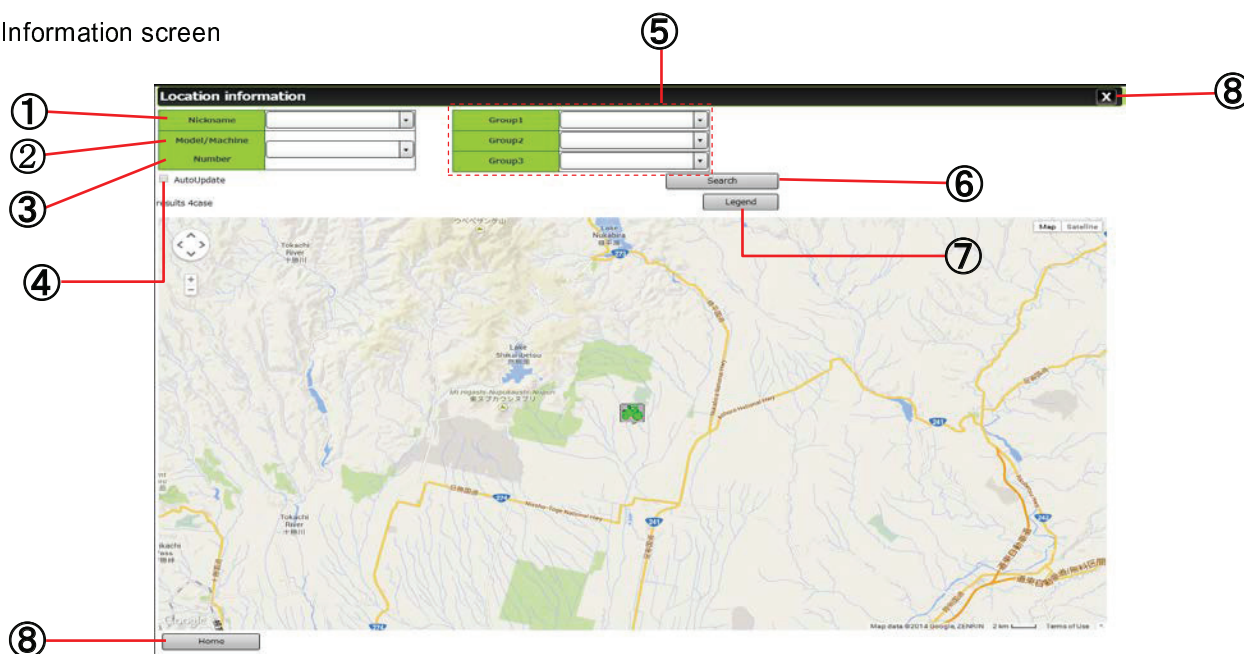

- | | | | |
|---|------------------|---|--|
| ① | Nickname | : | Specify your desired machine by choosing the nickname associated with it. |
| ② | Model Code | : | Enter the model code of the machine as needed. |
| ③ | Machine Number | : | Enter the machine number as needed. |
| ④ | Auto Refresh | : | Check the check box to have the location information updated every 30 seconds. |
| ⑤ | Groups 1 to 3 | : | You can narrow the search criteria. For example, you may want to narrow the search by specifying a particular operator, area, or work description. |
| ⑥ | Search | : | Matches to your search will be displayed on the map. |
| ⑦ | Legend | : | Click this button to view a legend that describes the colors and meanings of the icons displayed on the map. |
| ⑧ | [Close] or [x] | : | Click to return to the Menu screen. |

② Choose the nickname of your desired machine.

Click the drop-down arrow (◆) to open a list of available options. Then choose your desired option.

③ Choose one of groups 1 to 3.

Click the drop-down arrow (◆) to open a list of available options. Then choose your desired option.

◆ To clear the currently selected option:

Click the blue horizontal bar. This allows you to clear the currently selected option.

④ Click [Search].

The machine that matches the criteria you specified in steps ② and ③ will be displayed on the map.

⑤ Click the machine icon displayed on the map.

A box pops up that contains the machine information including the model code, machine number, nickname, cumulative operating hours, and last update date.

◆ To close the pop-up box:

 
 
Click the [x] button at the upper right corner of the box.

⑥ Click [Legend] to check the meaning of the icon color.

A window appears that describes the colors and meanings of the icons displayed on the map.

Click [Close] to close the window.

⑦ When you are done, click [Close] or [x] to return to the Menu screen.

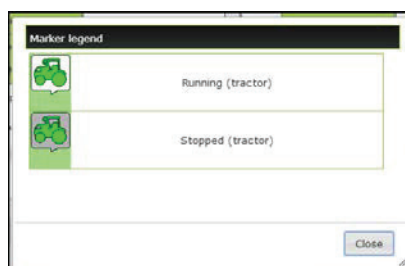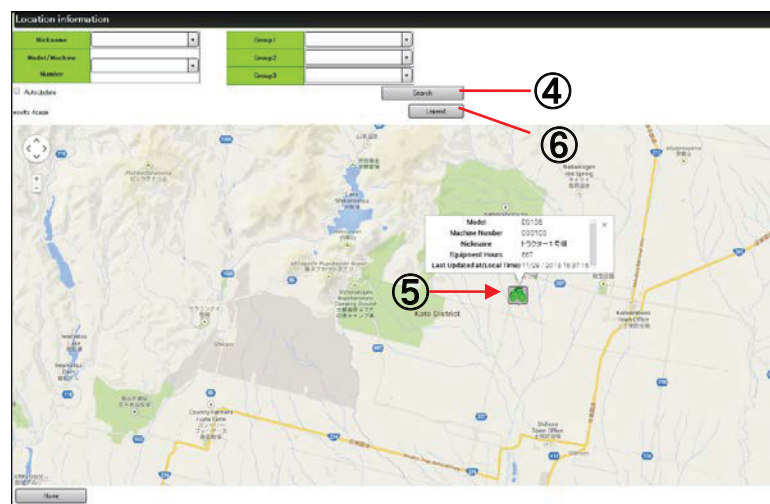


8 Creating a Daily Operation Report (Daily Operation Report)

You can create a daily work report by adding notes to the daily work performance.

Working with the Daily Operation Report Top Screen

① On the Menu screen, click .

 The Select Machine screen appears.

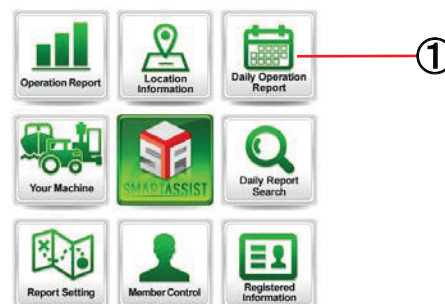


② Click the row of the machine of interest.

The Daily Operation Report top screen appears.

- ◆ When you hover the mouse pointer over one of the machines, its text color changes. You can then select that particular machine by just clicking it.



 [Daily Operation Report] Top Screen

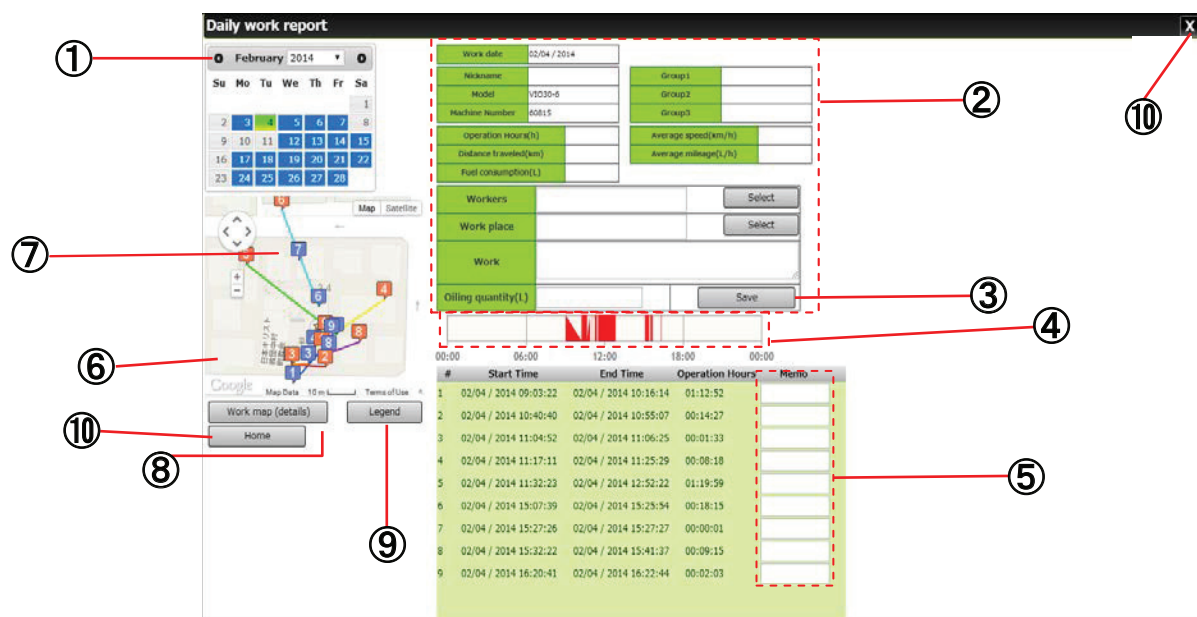


- ① Calendar : Choose the date of the report you want to add notes to.
Blue: operating days Green: chosen date
- ② Input boxes : These boxes let you enter the operator name, place of work, work description, and oiling quantity.
- ③ [Save] : Click this button to save your entries.
- ④ Operating Time Slots : The red color indicates the operating time slots.
- ⑤ Note input boxes : You can enter a note for each time slot.
- ⑥ Location Information : Displays the machine location for each time slot.
(■: Operational ■: Not operational)
- ⑦ [Map: Aerial Mode] : Allows you to switch the map to aerial mode.
- ⑧ [Work Map (Details)] : Allows you to view more detailed operating locations.
- ⑨ [Legend] : Displays a window that describes the colors and meanings of the icons.(These items are numbered in the order you use them.)
- ⑩ [Close] or [x] : Click to return to the Menu screen.

③ Click your desired date on the calendar.

You can choose a date by just clicking it and then enter notes for that chosen date.

 - ◆ You can also select a different year or month using the drop-down list or buttons located in the upper part of the calendar.

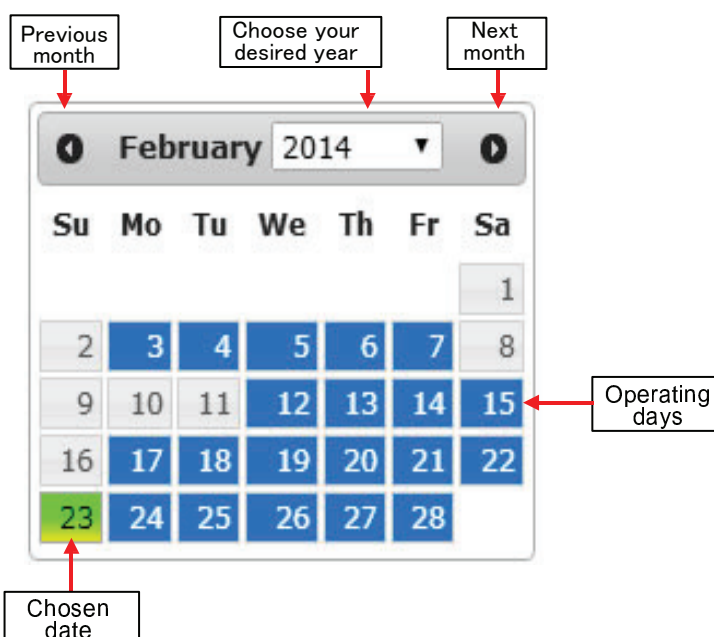

- ◆ It is only the operating days (displayed in blue) that accept the input of notes. Once you click one of the operating days, it turns green indicating that it is now chosen.
- ◆ You cannot select a date when your machine did not operate.


#	Start Time	End Time	Operation Hours	Memo
1	02/04 / 2014 09:03:22	02/04 / 2014 10:16:14	01:12:52	
2	02/04 / 2014 10:40:40	02/04 / 2014 10:55:07	00:14:27	
3	02/04 / 2014 11:04:52	02/04 / 2014 11:06:25	00:01:33	

④ Fill in the [Operator] and [Place of Work] boxes by either typing in or choosing the appropriate entries.

Once you type entries into the [Operator] and [Place of Work] box, they are added to the pull-down lists so that you no longer have to type them in.

⑤ Click [Work Map (Details)].

 - The map traces the movement of your machine exactly in the order it started and stopped.
- The trace of the machine's movement may involve some error depending on the GPS radio wave condition.

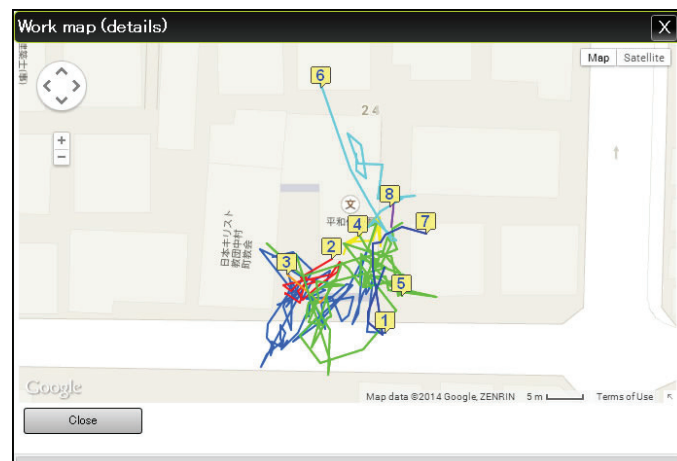


Display in [Aerial Mode]

- Check the ☐ Label check box to display place names and other text information on the map.



[Legend] Screen

 - ◆ To close the [Legend] window, click [Close] on the window.

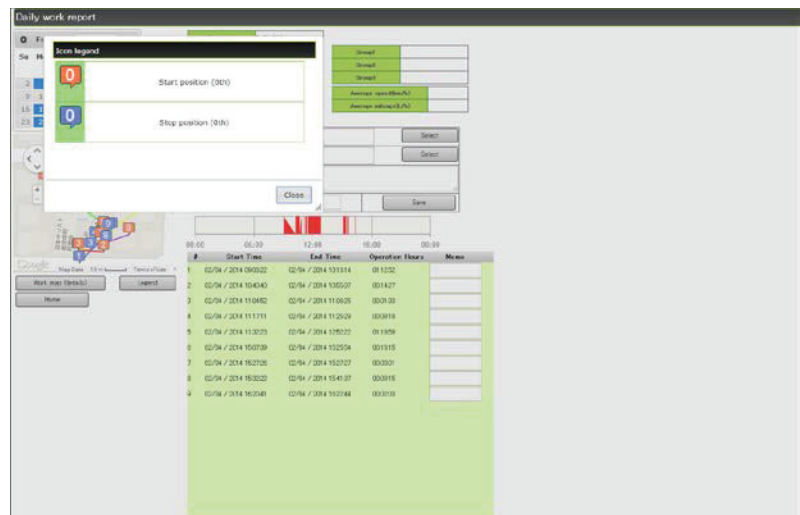

- ⑥ When you are done, click [Close] or [x] to return to the Menu screen.

9 Retrieving Daily Operation Reports (Daily Report Search)

You can search for daily work reports you created in "8. Creating a Daily Operation Report (Daily Operation Report)" and save the search results as a text file.

Working with the Daily Report Search Screen

① On the Menu screen, click .

The Daily Report Search screen appears.




[Daily Report Search] Top Screen



- | | | |
|--------------------|---|--|
| ① Nickname | : | Specify your desired machine by choosing the nickname associated with it. |
| ② Model Code | : | Enter the model code of the machine as needed. |
| ③ Machine Number | : | Enter the machine number as needed. |
| ④ Groups 1 to 3 | : | You can narrow the search criteria. For example, you may want to narrow the search by specifying a particular operator, area, or work description. |
| ⑤ Start Date | : | Select the start date of the search period. |
| ⑥ End Date | : | Select the end date of the search period. |
| ⑦ Operator | : | Type in or choose an operator. |
| ⑧ Place of Work | : | Type in or choose a place of work. |
| ⑨ Search | : | Searches for matches to your specified search criteria. |
| ⑩ Search Results | : | Displays a list of matching daily work reports. |
| ⑪ Save as CSV | : | Allows you to save all of the matching daily work reports as a CSV file. |
| ⑫ [Close] or [x] | : | Click to return to the Menu screen. |


② **Narrow the search by typing in or selecting search criteria that define more precisely which machines' daily work reports should be returned.**

 - For the following search criteria, you can display an editable field by clicking the drop-down arrow (◆). Once you type entries into these boxes, they are added to the drop-down lists so that you no longer have to type them in. You can click to choose any item displayed in the drop-down lists.
 - "Nickname"
 - "Groups 1 to 3"
 - "Operator"
 - "Place of Work"
- To clear the currently selected option, click the blue horizontal bar.
- Fill in the Model Code and Machine Number boxes as needed.

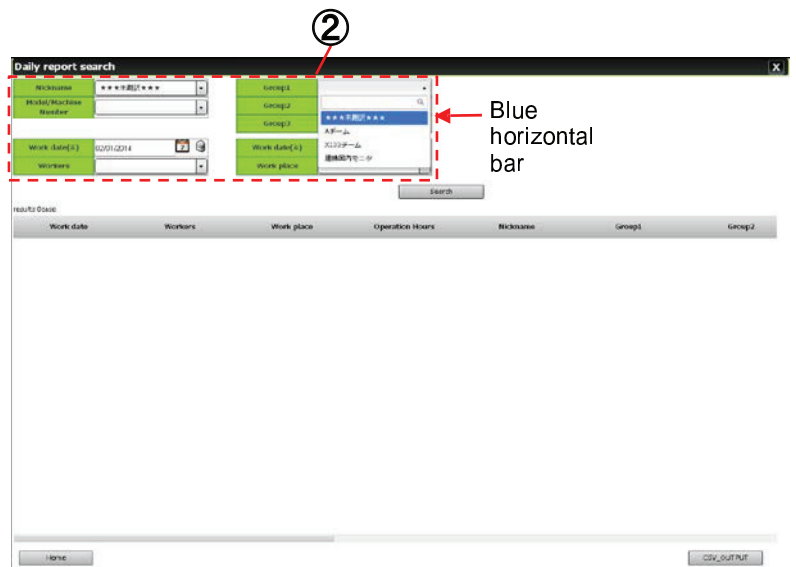

③ **Specify the period within which you want to search for daily work reports.**

 - To specify the start date of the period, click the  icon in the [Start Date] box. A calendar appears.
 - Click to choose your desired start date of the search period. The box is automatically filled in with the chosen date.
 - To specify the end date of the period, click the  icon in the [End Date] box. A calendar appears.
 - Click to choose your desired end date of the search period. The box is automatically filled in with the chosen date.
- ◆ To clear the currently selected date in the calendar, click the  icon.

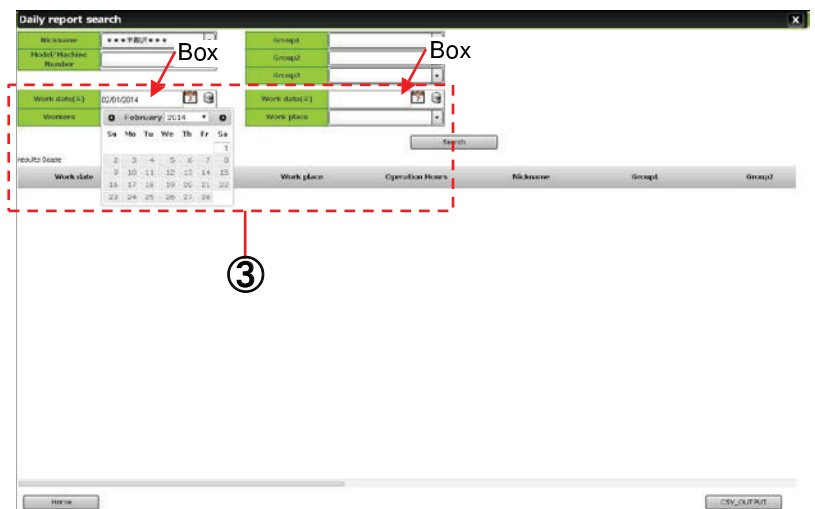

④ Click [Search].

The search results appear in the middle of the screen.

 
To download the daily reports in a text file format;

① With the search results displayed in the middle of the screen, click [Save as CSV].

By doing this, you can download a CSV text file that contains the search results.


Internet Explorer:

- 1) The "Download File" screen appears.
- 2) Click [Save] to download the CSV file.

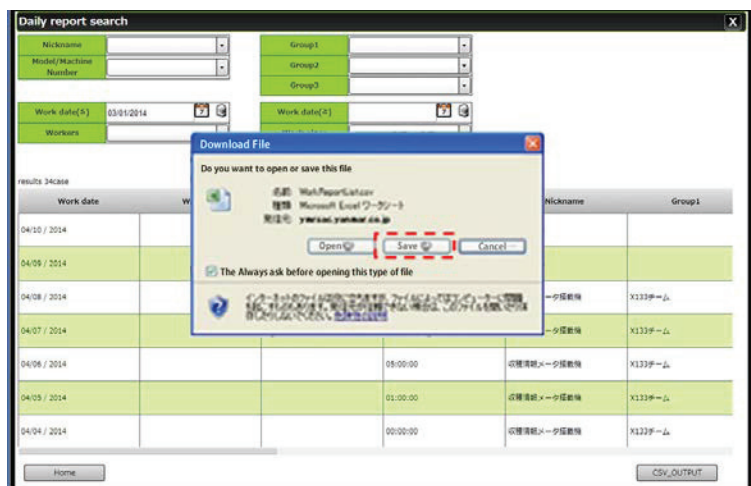

Google Chrome:

 - After you click [Save as CSV], a button titled "WorkReportList.csv" (①) appears at the lower left of the screen. When you click this button, the CSV file is displayed.
- To download the file, move to the download screen by clicking the "Display All Downloads" (②).

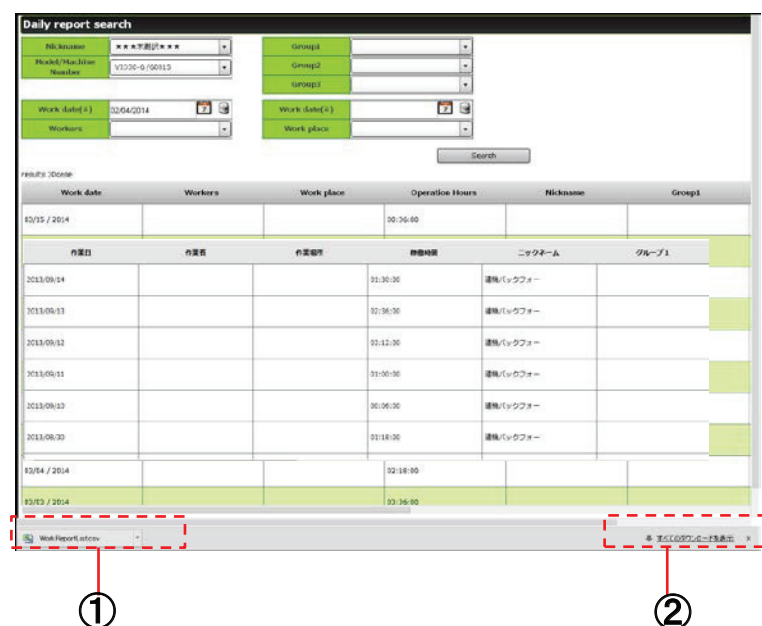

Example of the Displayed Download Screen

Click the file name

"WorkReportList.csv" next to the Excel icon.

Then you can download the CSV file and save it in a location of your choice.



Tips on CSV Files

You can use Excel to open a CSV file you have downloaded.

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R
	Work date	Work place	Operation	Machine	Group	Group	Group	Work	Distance	Fuel	Average of Fuel	Average of Fuel	Average of Fuel	Machine Number				
1	08/15 / 2014													V000-S	10015			
2	08/15 / 2014													V000-S	10015			
3	08/14 / 2014													V000-S	10015			
4	08/13 / 2014													V000-S	10015			
5	08/11 / 2014													V000-S	10015			
6	08/06 / 2014													V000-S	10015			
7	08/07 / 2014													V000-S	10015			
8	08/05 / 2014													V000-S	10015			
9	08/05 / 2014													V000-S	10015			
10	08/04 / 2014													V000-S	10015			
11	08/02 / 2014													V000-S	10015			
12	08/01 / 2014													V000-S	10015			
13	08/28 / 2014													V000-S	10015			
14	08/27 / 2014													V000-S	10015			
15	08/26 / 2014													V000-S	10015			
16	08/25 / 2014													V000-S	10015			
17	08/24 / 2014													V000-S	10015			
18	08/22 / 2014													V000-S	10015			
19	08/21 / 2014													V000-S	10015			
20	08/20 / 2014													V000-S	10015			
21	08/19 / 2014													V000-S	10015			
22	08/18 / 2014													V000-S	10015			
23	08/17 / 2014													V000-S	10015			
24	08/15 / 2014													V000-S	10015			
25	08/14 / 2014													V000-S	10015			
26	08/13 / 2014													V000-S	10015			
27	08/12 / 2014													V000-S	10015			
28	08/07 / 2014													V000-S	10015			
29	08/06 / 2014													V000-S	10015			
30	08/05 / 2014													V000-S	10015			
31	08/04 / 2014													V000-S	10015			

- ⑤ When you are done, click [Close] or [x] to return to the Menu screen.

 
10 Listing or Searching for Your Machines (Your Machine)

Provides a list of SMARTASSIST-ready machines owned by you.


Working with the Your Machine Screen

① On the Menu screen, click  .

The Your Machine screen appears.

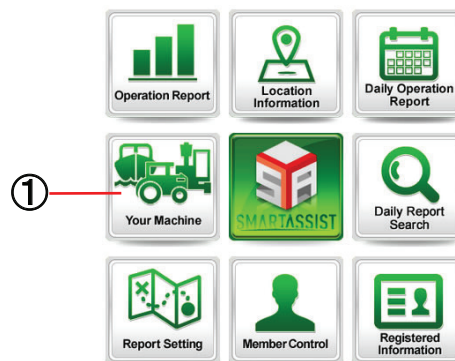

[Your Machine] Screen

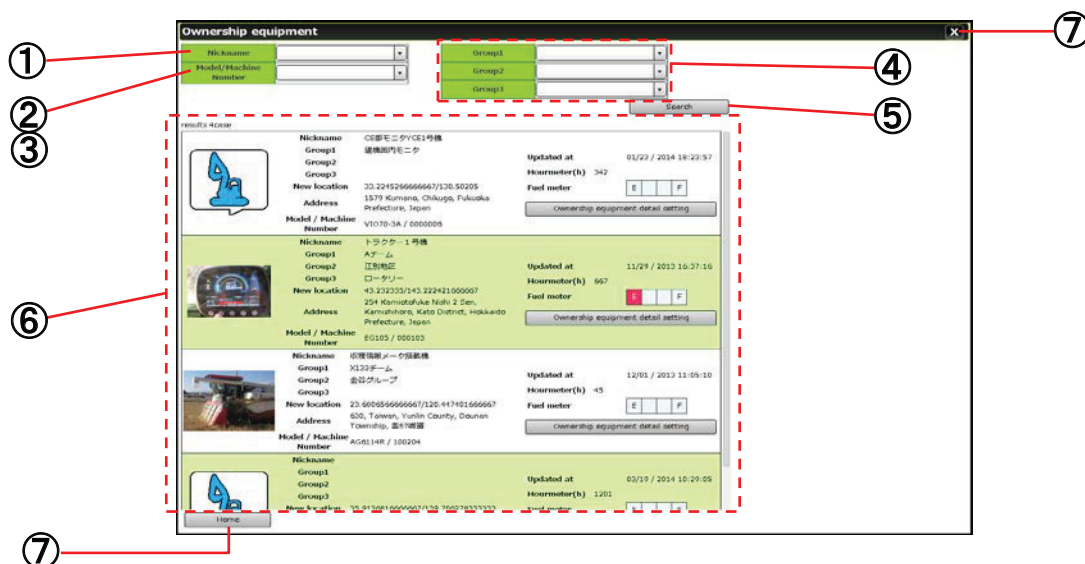 


- ① Nickname : Specify your desired machine by choosing the nickname associated with it.
- ② Model Code : Displays the model code associated with the machine.
- ③ Machine Number : Displays the machine number associated with the machine.
- ④ Groups 1 to 3 : You can specify a particular group to narrow the search to that group. For example, you may want to narrow the search by specifying a particular operator, area, or work description.
- ⑤ Search : Searches for matches to your specified search criteria.
- ⑥ Search Results : Displays a list of the machines owned by you.
- ⑦ [Close] or [x] : Click to return to the Menu screen.

② Type in or choose the appropriate search criteria.


③ Click [Search].

 - Models that match the search criteria appear on the screen.
- For the [Nickname] and [Group 1 to 3] search criteria boxes, you can display an editable field by clicking the drop-down arrow (◆). Once you type entries into these boxes, they are added to the drop-down lists so that you no longer have to type them in. You can click to choose any item displayed in the drop-down lists.
- To clear the currently selected option, click the blue horizontal bar.
- Fill in the Model Code and Machine Number boxes as needed.

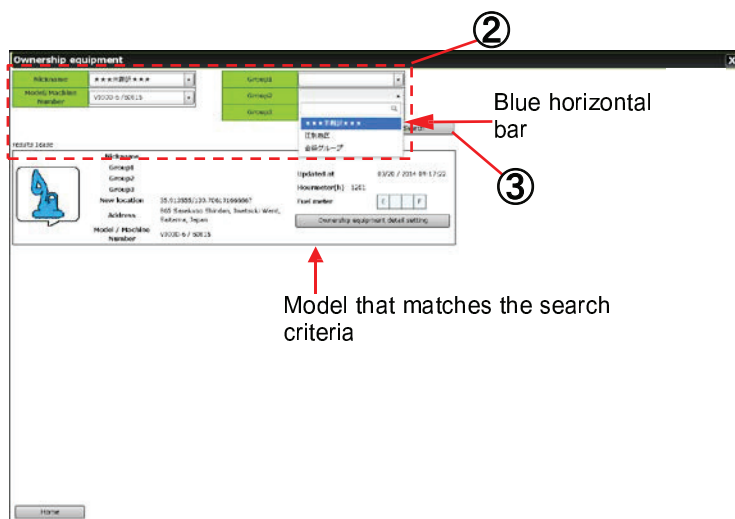

④ Click [Your Machine Details].

 Type in or choose the advanced settings for retrieving your purchased machines.

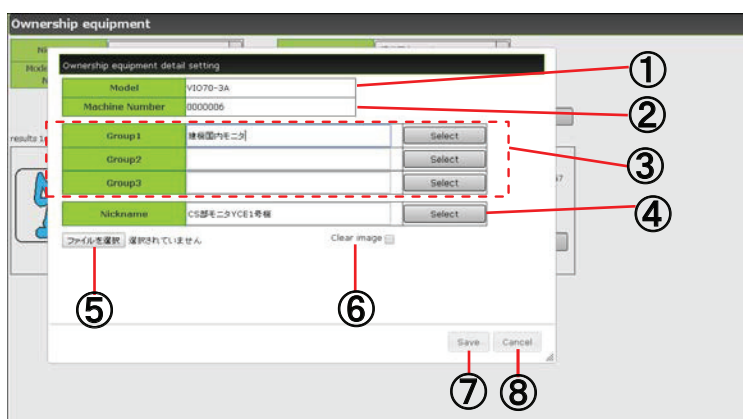

- | | | |
|------------------|---|--|
| ① Model Code | : | Type in a model code. |
| ② Machine Number | : | Type in a machine number. |
| ③ Groups 1 to 3 | : | You can narrow the search criteria. For example, you may want to narrow the search by specifying a particular operator, area, or work description. |
| ④ Nickname | : | You can make your machine easy-to-find by associating it with a nickname. |
| ⑤ [Browse] | : | Browse and select the image file you want displayed along with your machine in the list of purchased machines. |
| ⑥ Clear Image | : | You can clear the currently selected image file by check the check box before saving the changes. |
| ⑦ [Save] | : | Click this button to save your changes. |
| ⑧ [Cancel] | : | Click this button to cancel your changes. |

⑤ When you are done, click [Close] or [x] to return to the Menu screen.

11 Managing When and Where Your Machine Should Operate (Report Setting)

You can configure SMARTASSIST to monitor whether or not your machine is operating only during your specified operating hours and within your specified operating area. SMARTASSIST will send a theft notification if these settings are violated.

Working with the Report Setting Screen

- ① On the Menu screen, click .

The Report Setting screen appears.

 


- ② Click the row of the machine of interest.

- ◆ When you hover the mouse pointer over one of the machines, its text color changes.



[Report Setting] screen

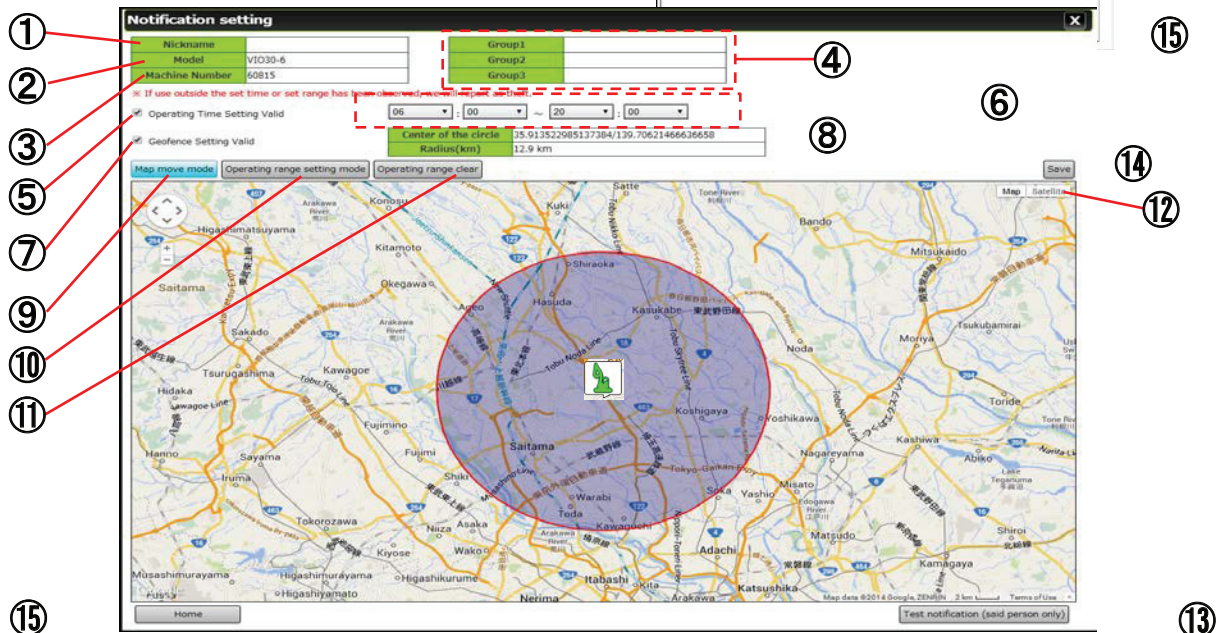

- | | | |
|---------------------------|---|---|
| ① Nickname | : | Displays the nickname associated with your machine. |
| ② Model Code | : | Displays the model code associated with your machine. |
| ③ Machine Number | : | Displays the machine number associated with your machine. |
| ④ Groups 1 to 3 | : | Displays the group settings associated with your machine. |
| ⑤ Monitor Operating Hours | : | Check the check box to enable the monitoring. |
| ⑥ Start and End Times | : | Use these boxes to define the hours during which your machine should operate. |
| ⑦ Monitor Operating Area | : | Check the check box to enable the monitoring. |
| ⑧ Operating Area Location | : | When you specify the operating area, this box displays the location information (center coordinates and radius) of your specified operating area. |

 
- ⑨ [Pan Map] : Click this button to switch to the mode that allows you pan or scale the map.
- ⑩ [Set Operating Location] : Click this button to switch to the mode that allows you to specify the operating area.
- ⑪ [Clear Operating Location] : Clears the currently specified operating area.
- ⑫ [Map: Aerial Mode] : Allows you to switch the map to topographic or aerial mode.
- ⑬ Notification Test (Owner Only) : Allows you to check whether the settings are correctly configured.
- ⑭ [Save] : Click this button to save your changes.
- ⑮ [Close] or [x] : Click to return to the Menu screen.

How to Pan or Scale the Map

When you enter into the Report Setting screen, the [Pan Map] button is automatically selected so that you can pan or scale the map.


How to Specify the Operating Hours

- ① Check the [Monitor Operating Hours] box.
- ② Define the start and end times of the hours during which your machine should operate.
- ③ When you are done, click [Save] to put the changes into effect.

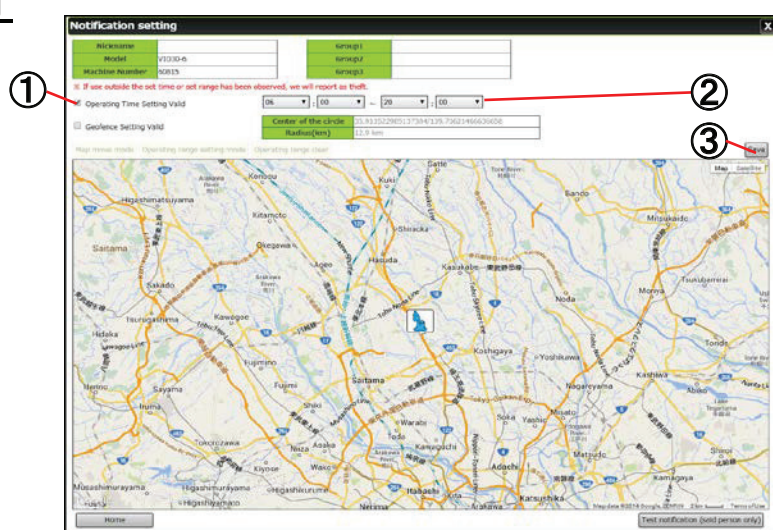

How to Specify the Operating Area and Configure the Theft Notification Feature

 - ① Check the [Monitor Operating Area] box.
- ② Click to select the [Pan Map] button and then pan the map to display your desired area.
- ③ Click the [Set Operating Location] button. Then point to and single-click on your desired center point.
- ④ Move the mouse while holding down the left mouse button.

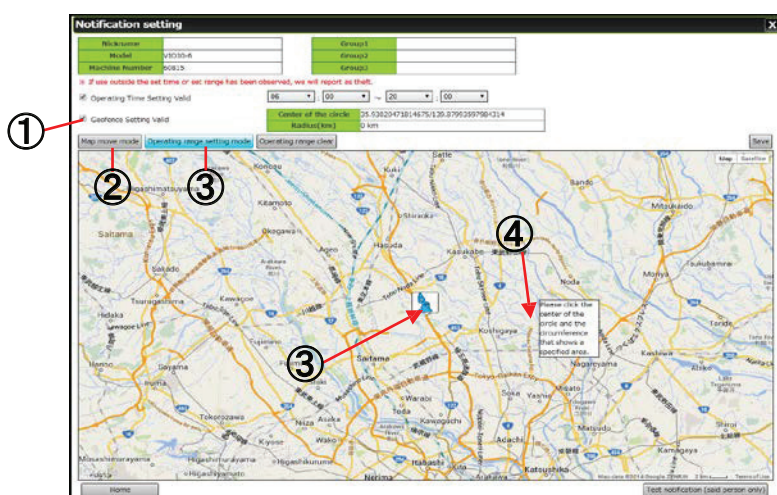

⑤ Drag the mouse until the length of the dot line reaches your desired radius. Then single-click the mouse.

⑥ A circle appears on the map, indicating the specified operating area.

- ◆ The location information (center coordinates and radius) of the operating area is displayed as numeric values in the middle of the screen.
- ◆ If you have specified an incorrect area, you can clear the current area by clicking [Clear Operating Location]. If this is the case, repeat steps

⑦ When you are done, click [Save] to put the changes into effect.

How the Theft Notification Feature Works

 
- ◆ SMARTASSIST will send a theft notification by email upon violation of your specified operating hours and/or operating area.

⑧ When you are done, click [Close] or [x] to return to the Menu screen.


Changing the Map Mode

You can change the map screen mode to "Topographic" or "Aerial" as appropriate to your needs.

- ◆ Check the [☐Label] check box (①) to display place names and other text information on the map.
- ⑤ When you are done, click [Close] or [x] to return to the Menu screen.

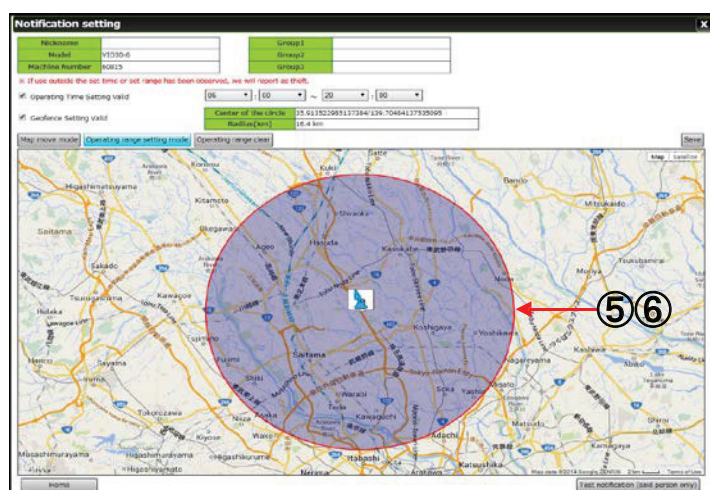

⑦

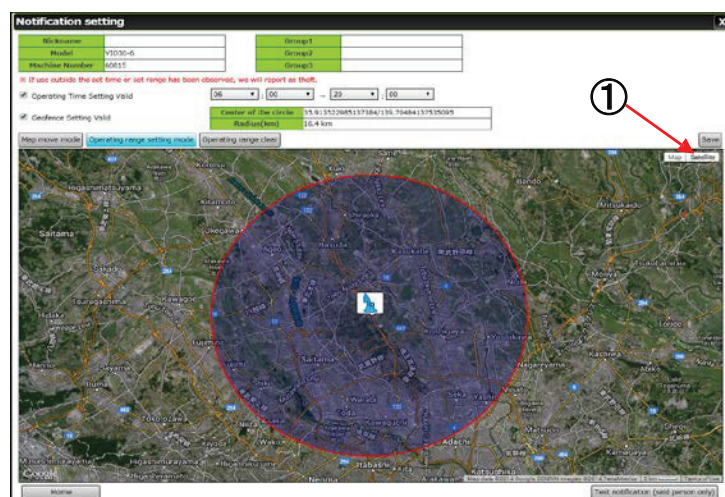 


12 Adding Members Allowed to Log in (Member Control)

Allows you to add, change, and delete members allowed to log in as well as to reset passwords.


Working with the Member Control Screen

① On the Menu screen, click .

 The Member Control screen appears.

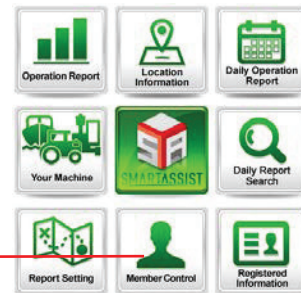

[Member Control] Screen

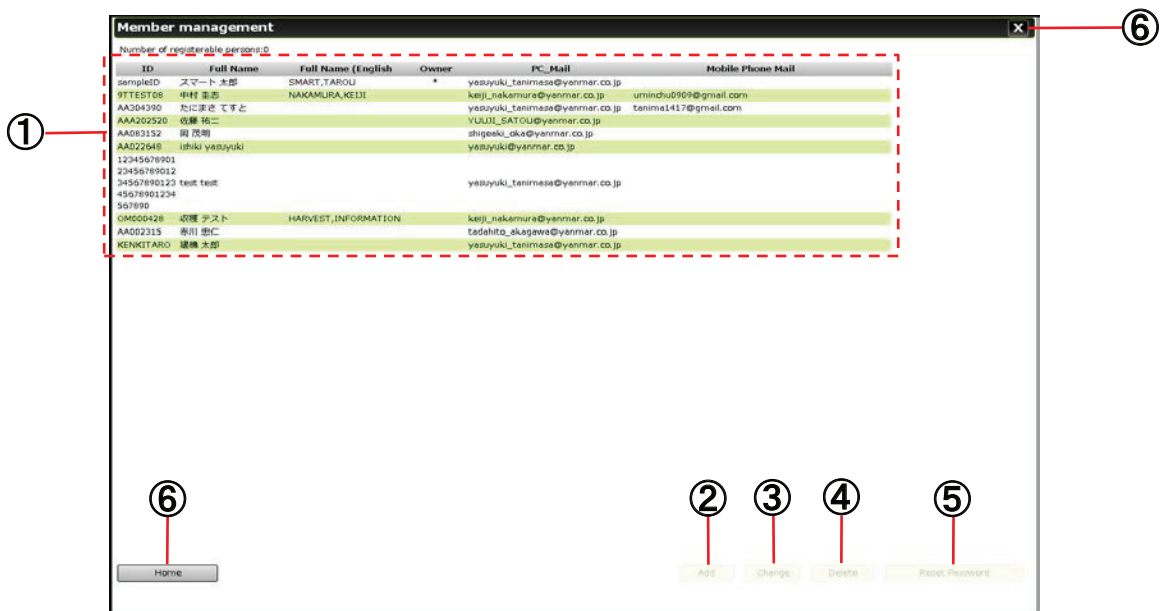

- ① Member List : Displays a list of registered members.
- ② [Add] : Allows you to add a member.
- ③ [Change] : Allows you to change the registration details of a member.
- ④ [Delete] : Allows you to delete a member.
- ⑤ [Reset Password] : Allows you to reset the password of a member.
- ⑥ Close] or [x] : Click to return to the Menu screen.

To add a member:

① Click on [Add].

The Registered Information screen appears.



② Type in registration details.

- ◆ Fill in every input box with correct information.
- ◆ For "Time Zone," choose [(GMT + 09 00) Osaka, Sapporo, Tokyo] from the drop-down list.

③ Click [Register].

- ◆ Clicking this button saves your entries.
- ◆ An email message that indicates the ID and password will be sent to the registered email address.



To change the registration details of a member:

① In the Member List, click the member whose registration details you want to change.

The row of the clicked member is

Member management

Number of registrable persons: 0

ID	Full Name	Full Name (English)	Owner	PC_Mail	Mobile Phone Mail
sampleID	スマート 太郎	SMART,TAROU	*	yesuyuki_tanimasa@yanmar.co.jp	
9TTTEST08	中村 美奈	NAKAMURA,MI		keiji_nakamura@yanmar.co.jp	ummdhu0707@gmail.com
AA004350	たにまさ できと			yesuyuki_tanimasa@yanmar.co.jp	tanimasa1417@gmail.com
AA004250	佐藤 祐二			YUJI_SATO@yanmar.co.jp	
AA003152	岡 浩明			shupoku_oka@yanmar.co.jp	
AA022948	ishiku yesuyuki			yesuyuki@yanmar.co.jp	
12345678901					
23456789012				yesuyuki_tanimasa@yanmar.co.jp	
34567890123	test test				
45678901234					
567890					
0A000428	成瀬 テスト	INFORMATION		keiji_nakamura@yanmar.co.jp	
AA002315	西川 忠仁			tadashi_ekagawa@yanmar.co.jp	
KENKITARO	建機 太郎			yesuyuki_tanimasa@yanmar.co.jp	

② Click [Change].

The Registered Information screen appears.



③ Change the registration details as appropriate.

Move the cursor into each box that contains information you want to change. Then edit the text.

④ When you are done, click [Register] to save the changes.



 
To delete a member:

- ① **Point to the member you want to delete.**

The row of that member is then highlighted in a different color.

- ② Click [Delete].

The row of the selected member is then deleted.

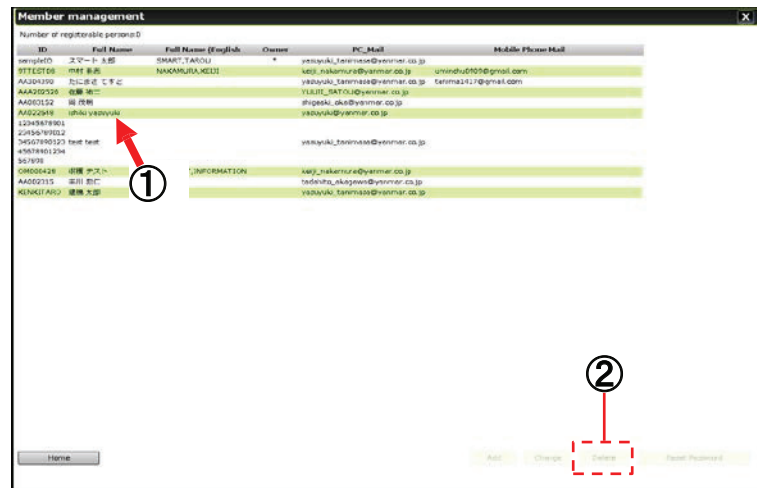

To reset the password of a member:

 
- ① Point to the member whose password you want to reset.

The row of that member is then highlighted in a different color.

- ② Click [Reset Password].

The password of the selected member is then reset.

For information on how to reconfigure the password of a member, see page 27.

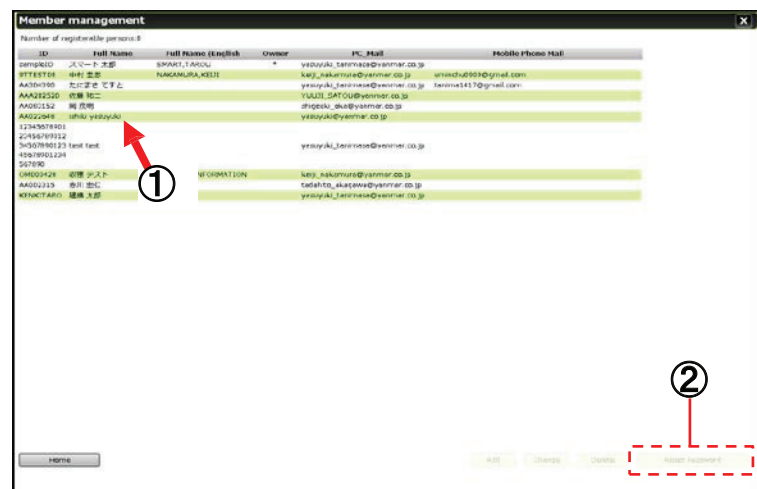

To exit from Member Control:

- ① When you are done, click [Close] or [x] to return to the Menu screen.**

13 Entering the Owner's Registration Details (Registered Information)

This screen allows you, the owner, to enter or change your own registration details (including your own ID and password).

Working with the Registered Information Screen

① On the Menu screen, click .



② The Registered Information screen appears.

 
- ◆ Colored input boxes are mandatory fields.
- ◆ This screen allows you to change the initial ID provided by Yanmar.
- ◆ Be sure to fill in at least either the [PC Email Address] or [Mobile Email Address] box.
- ◆ If you use the Report Setting feature to receive email notifications, check either the [PC] or [Mobile] check box in the "Notification Recipient" row.
- ◆ For "Time Zone," choose [(GMT + 09 00) Osaka, Sapporo, Tokyo] from the drop-down list.
- ◆ Fill in every input box with correct information.

③ When you are done, click [Register] to save the registration details.

To change the owner's password:

- ① On the Registered Information screen, click [Change Password].

The Change Password window appears.

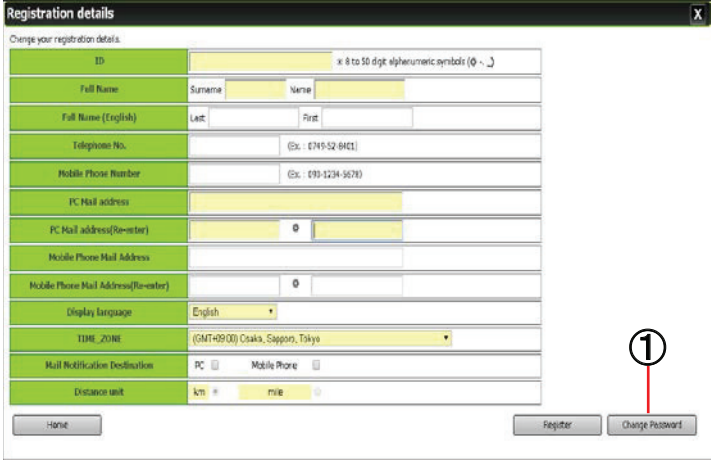


The 'Registration details' window is shown. It contains various fields for user information. A red circle with the number '1' points to the 'Change Password' button at the bottom right.

- ② Type in the current and new passwords.

- ③ Click [Register].

 The new password is saved.

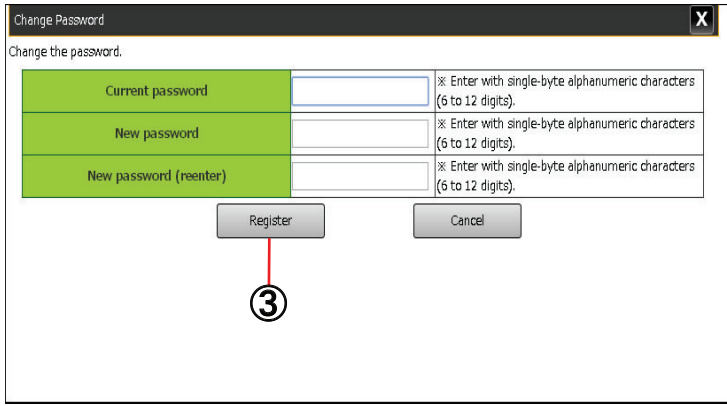

The 'Change Password' window is shown. It has three input fields: 'Current password', 'New password', and 'New password (reenter)'. Each field has a text box and a label indicating it should be entered with single-byte alphanumeric characters (6 to 12 digits). A red circle with the number '3' points to the 'Register' button at the bottom.

◆ The Change Password window opens as a new window.

To exit from Member Control:

- ① When you are done, click [Close] or [x] to return to the Menu screen.